

Acoustic pillow alarm user guide


GEOFIRE

Email: enquiries@geofire.co.uk
www.geofire.co.uk




Quick setup


1. Slide off the pillow pad and remove the battery cover.

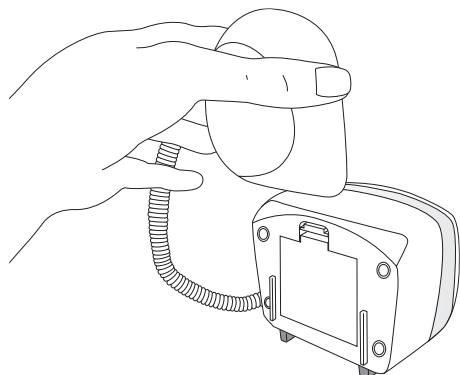

2. Insert the batteries the correct way up. The orientation is marked in the battery compartment.

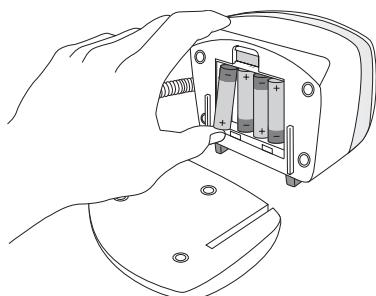


3. Clip the battery cover into position.

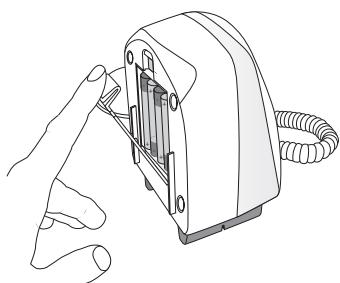


Using the unit

1. Place the pillow pad underneath the pillow you intend to sleep on.

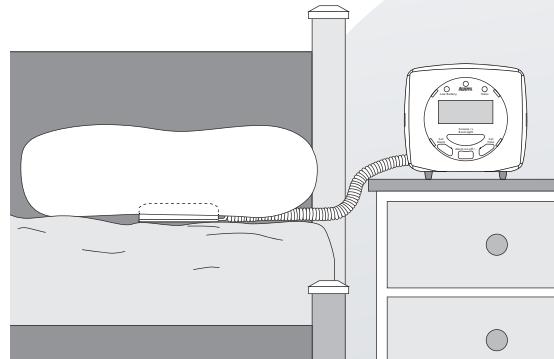

2. In the event of a fire, the pillow pad will vibrate and the unit will flash. The word 'fire' will also be present on the display.

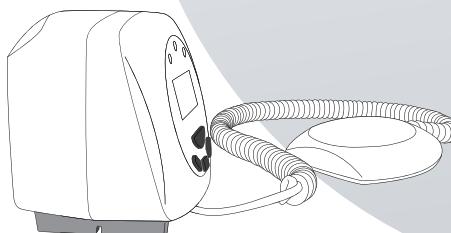

If the alarm triggers

If the unit enters fire alarm state when there is no fire alarm sounding, pressing the 'Alarm on-off' button will clear the fire state. If the unit subsequently detects a sound it will trigger back into fire state.


After use

Please remove the batteries before storing the pillow alarm.



AGRIPPA

Setting the time


1. Press and hold the 'Set Time' button.

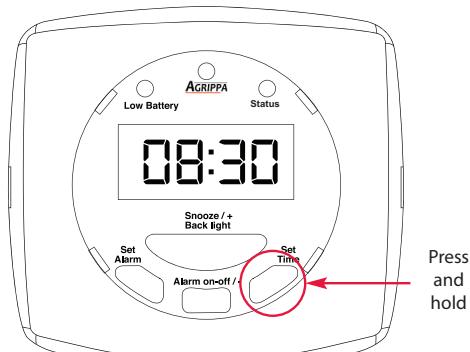

2. Press the up or down buttons to set the time.

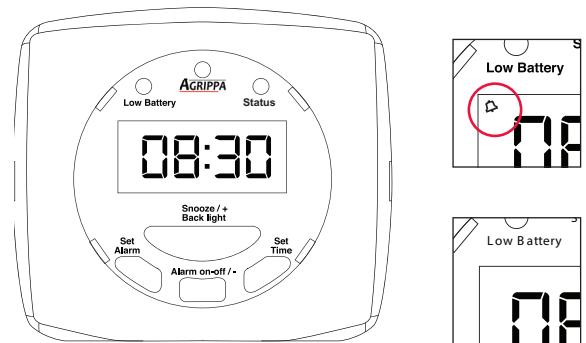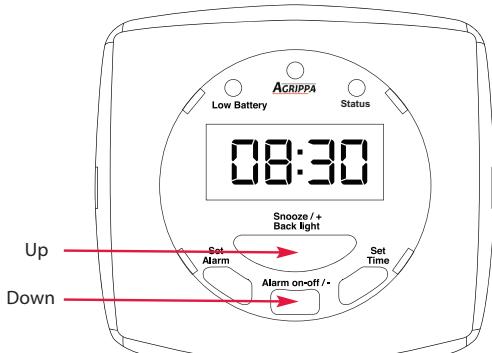


3. When the alarm triggers the pillow pad will vibrate. Pressing the 'Snooze' button will pause the alarm for five minutes.

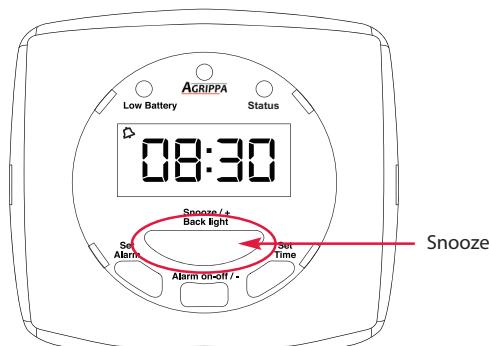

Daily timed alarm

1. Press and hold the 'Set Alarm' button and use the up and down buttons to set the alarm time.

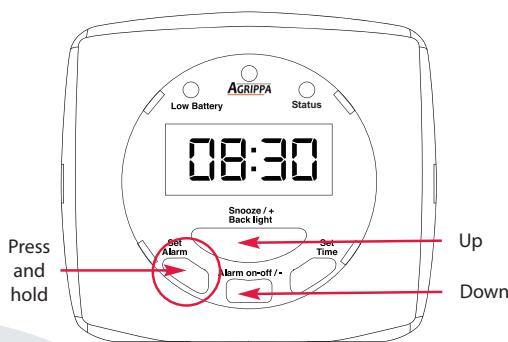

2. To enable/disable the alarm at any instant, press the 'Alarm on-off' button.

Displays

Fire: When the unit is in a fire state, FIRE will be displayed on the screen and the pillow alarm unit will flash. The pillow pad will also vibrate with a continuous pattern.

Alarm: When the timed alarm comes round, the screen backlight will flash and the time will be displayed on the screen. The pillow pad will also vibrate with an interrupted pulse pattern.

Status LED: If the status LED is lit, the unit is listening to a loud noise. If it is flashing on every 13 seconds, the acoustic circuit is disabled (see, disabling the unit).

Low battery LED: If the low battery LED is lit, the batteries are low and should be replaced immediately.

Bell symbol: If the bell symbol is shown in the top left hand corner of the screen, the alarm is enabled.

Acoustic pillow alarm user guide


GEOFIRE

Email: enquiries@geofire.co.uk
www.geofire.co.uk




Quick setup


1. Slide off the pillow pad and remove the battery cover.

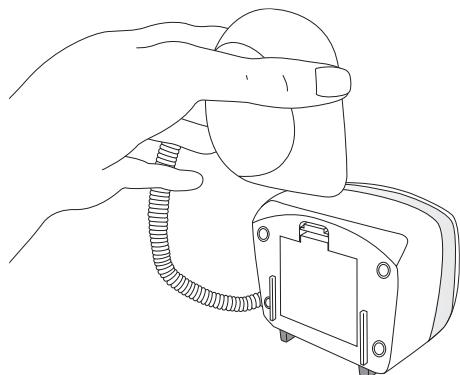

2. Insert the batteries the correct way up. The orientation is marked in the battery compartment.

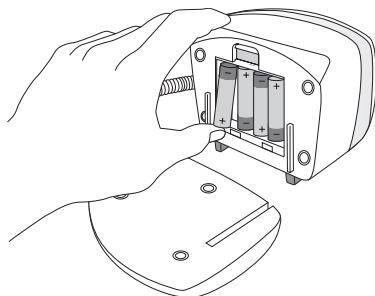


3. Clip the battery cover into position.

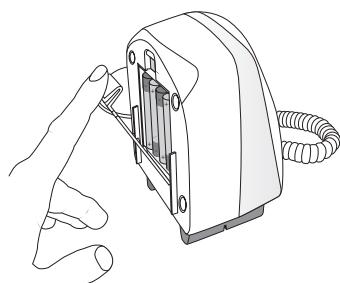


Using the unit

1. Place the pillow pad underneath the pillow you intend to sleep on.

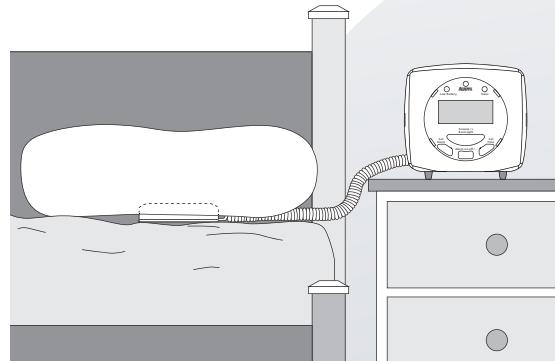

2. In the event of a fire, the pillow pad will vibrate and the unit will flash. The word 'fire' will also be present on the display.

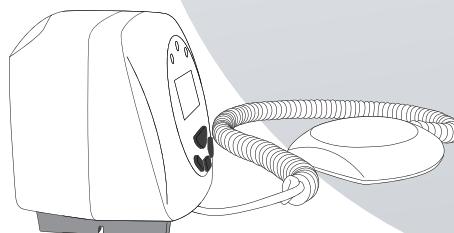

If the alarm triggers

If the unit enters fire alarm state when there is no fire alarm sounding, pressing the 'Alarm on-off' button will clear the fire state. If the unit subsequently detects a sound it will trigger back into fire state.


After use

Please remove the batteries before storing the pillow alarm.



AGRIPPA

Setting the time

1. Press and hold the 'Set Time' button.

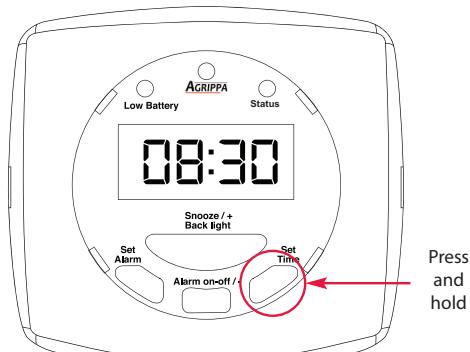

2. Press the up or down buttons to set the time.

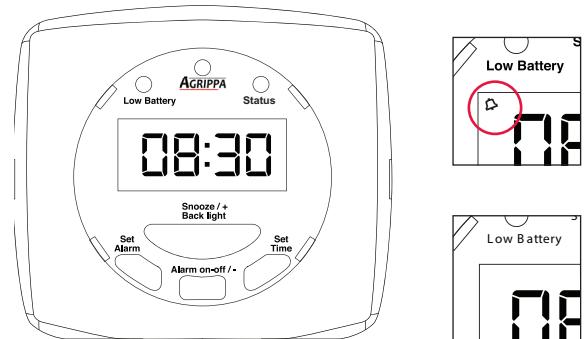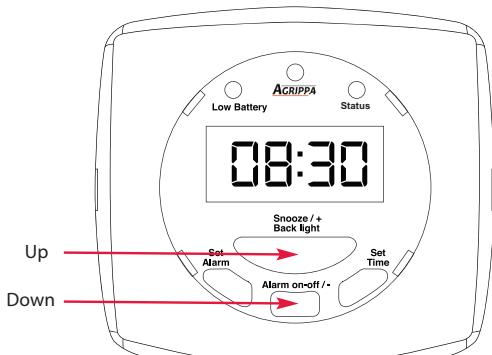


3. When the alarm triggers the pillow pad will vibrate. Pressing the 'Snooze' button will pause the alarm for five minutes.



Daily timed alarm

1. Press and hold the 'Set Alarm' button and use the up and down buttons to set the alarm time.

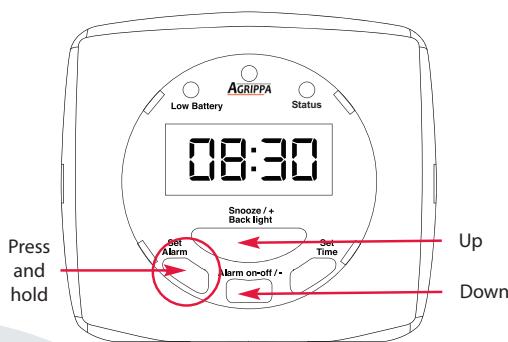

2. To enable/disable the alarm at any instant, press the 'Alarm on-off' button.

Displays

Fire: When the unit is in a fire state, FIRE will be displayed on the screen and the pillow alarm unit will flash. The pillow pad will also vibrate with a continuous pattern.

Alarm: When the timed alarm comes round, the screen backlight will flash and the time will be displayed on the screen. The pillow pad will also vibrate with an interrupted pulse pattern.

Status LED: If the status LED is lit, the unit is listening to a loud noise. If it is flashing on every 13 seconds, the acoustic circuit is disabled (see, disabling the unit).

Low battery LED: If the low battery LED is lit, the batteries are low and should be replaced immediately.

Bell symbol: If the bell symbol is shown in the top left hand corner of the screen, the alarm is enabled.